


# DDJ-FLX2

## Hardware Diagram for Serato DJ Lite / Serato DJ Pro

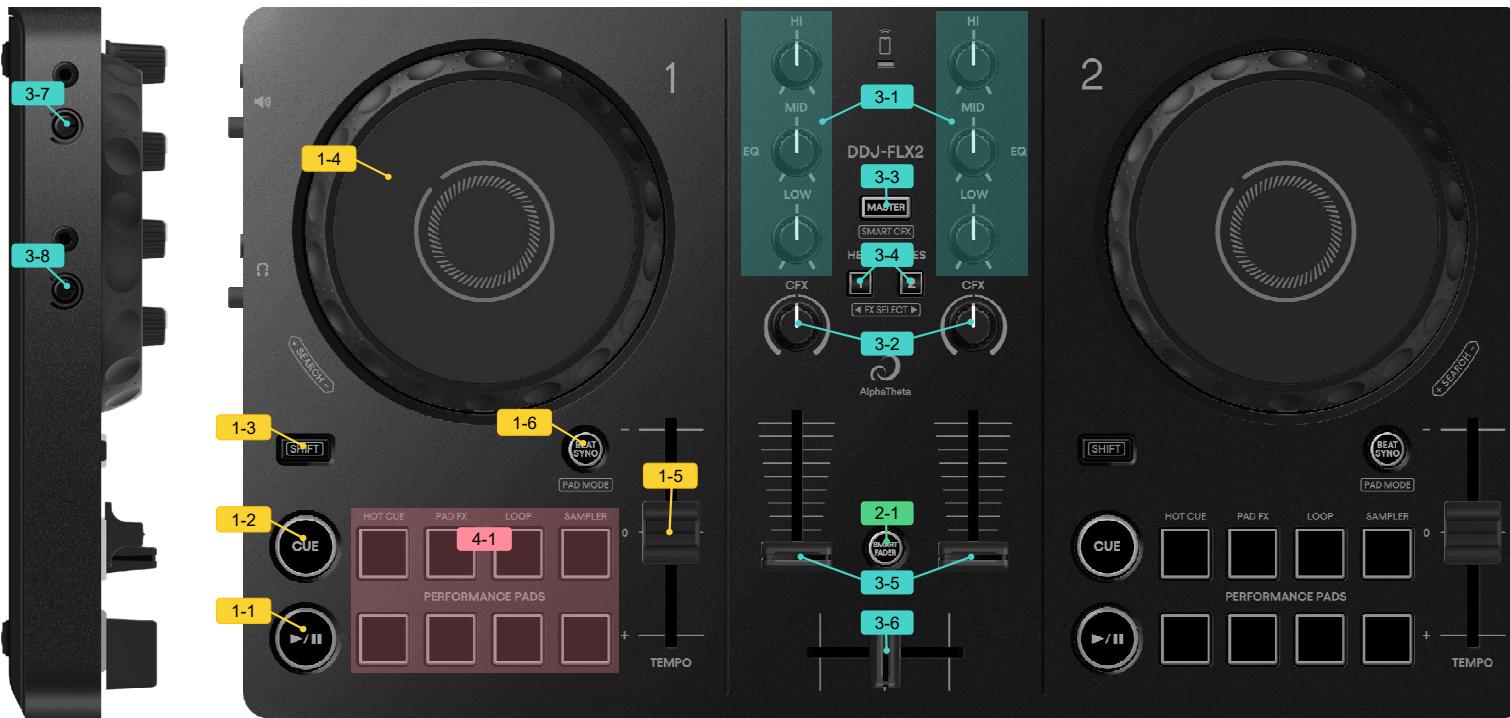


Group	No.	Name	Function	+SHIFT
<b>1.DECK</b> * Functions are the same for both left and right decks.				
1	PLAY/PAUSE	Play/Pause	Stutter	
2	CUE	Set/Call cue, Back cue	Jump to track start	
3	SHIFT	Shift	—	
4	JOG	Scratch	Search	
	platter	Pitch bend		
5	TEMPO	Tempo control		
6	BEAT SYNC	Sync on	Pad mode selection on/off *1	
		long press	Sync off	—

Group	No.	Name	Function	+SHIFT
<b>2.EFFECT</b>				
	1	SMART FADER	Smart Fader on/off	—
<b>3.MIXER</b>				
	1	EQ (HI, MID, LOW)	EQ (HI, MID, LOW)	
	2	CFX	Filter / Smart CFX	
	3	HEADPHONE CUE (MASTER)	Master out monitor on/off	Smart CFX on/off
	4	HEADPHONE CUE (CH)	Headphones monitor on/off	Select Smart CFX type
	5	CHANNEL FADER	Channel fader / Smart Fader	Channel fader start
	6	CROSSFADER	Crossfader / Smart Fader	Crossfader start
	7	MASTER LEVEL	Master Level	
	8	HEADPHONES LEVEL	Monitor level	

Group	No.	Name	Function	+SHIFT
<b>4.PERFORMANCE PADS</b>				
	1	PAD *3	mode	
		HOT CUE	Set/Call Hot Cue	Delete Hot Cue
		PAD FX	Pad FX on	
		AUTO LOOP	Auto Loop on/off	—
		SAMPLER	Playback sampler slot	Stop sampler slot
			Load sample to sampler slot	

\*1 When pad mode selection is enabled, you can switch the pad mode by pressing one of the Performance Pads, 1 through 4.

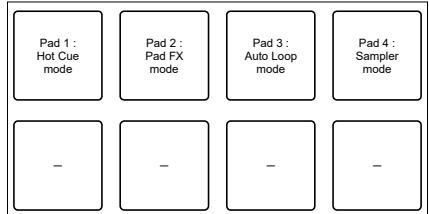


\*2 The pad assignment for each pad mode is shown as follows.


### ◆ Serato DJ Lite

#### Hot Cue mode

When the [SHIFT] button is not pressed.

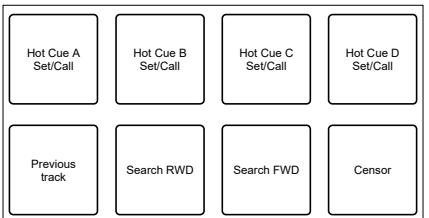


When the [SHIFT] button is pressed.

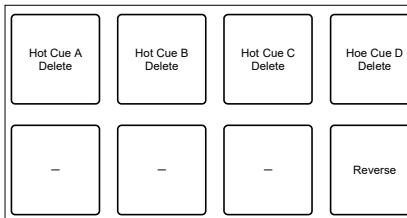


#### Pad FX mode

When the [SHIFT] button is not pressed.

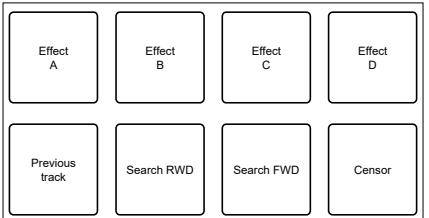


When the [SHIFT] button is pressed.

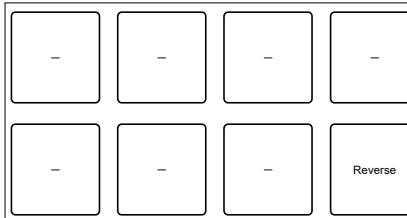


#### Auto Loop mode

When the [SHIFT] button is not pressed.

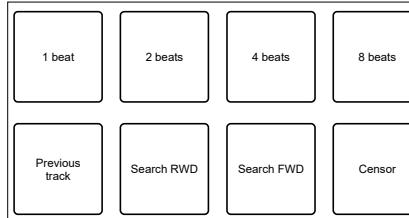


When the [SHIFT] button is pressed.

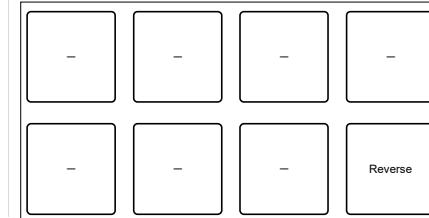


#### Sampler mode

When the [SHIFT] button is not pressed.

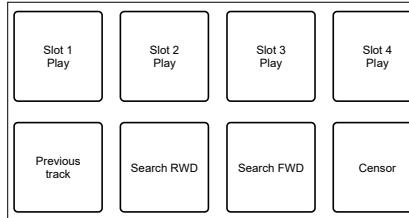


When the [SHIFT] button is pressed.

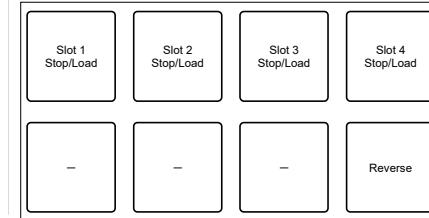


## ◆ Serato DJ Pro

### Hot Cue mode


When the [SHIFT] button is not pressed.

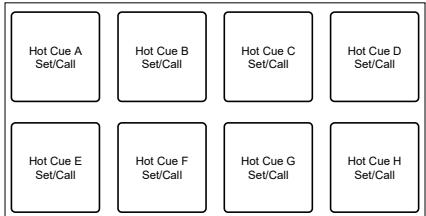


When the [SHIFT] button is pressed.

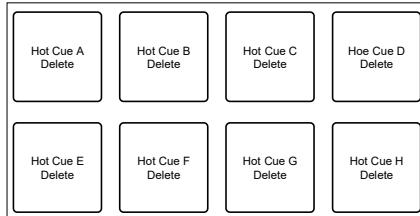

### Pad FX mode

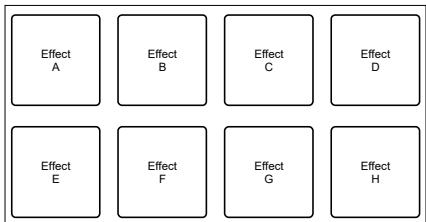


### Auto Loop mode

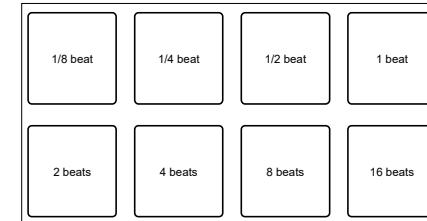

### Sampler mode

When the [SHIFT] button is not pressed.

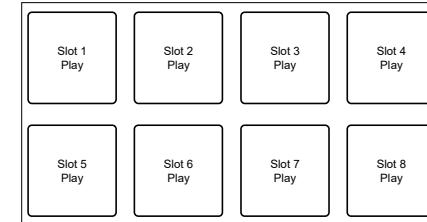

When the [SHIFT] button is pressed.

