*O* AlphaTheta

# DDJ-FLX2

Hardware Diagram for djay for iOS/Android , djay Pro for Mac/Windows



Group	No.	Name		Function	+SHIFT	
1.DECK		* Functions are the same	for both left a	nd right decks.		
	1	PLAY/PAUSE F		Play/Pause	-	
	2	CUE		Set/Call cue, Back cue	Jump to track start	
	3	SHIFT		Shift	-	
	4	JOG platter		Scratch	Search	
		wheel side		Pitch bend		
	5	TEMPO		Tempo control		
	6	BEAT SYNC *1		Sync on/off	Pad mode selection on/off *2	
		long press		Tempo reset	-	
2.EFF	ЕСТ					
	1	SMART FADER		Crossfader Fusion on/off	-	

Group	No.	Name	Function	+SHIFT	
.MIXE	R				
	1	EQ (HI, MID, LOW)	EQ (HI, MID, LOW)		
	2 CFX		Filter / Smart CFX		
	3	HEADPHONE CUE (MASTER)	Master out monitor on/off	Smart CFX on/off	
	4	HEADPHONE CUE (CH)	Headphones monitor on/off	Select Smart CFX type	
	5	CHANNEL FADER	Channel fader	Channel fader start	
	6	CROSSFADER	Crossfader / Crossfader Fusion	Crossfader start	
	7 MASTER LEVEL		Master Level (only when connected via USB)		
	8	HEADPHONES LEVEL	Monitor level (only when connected via USB)		

Group	No.	Name		Function	+SHIFT
4.PER	FOR				
	1	PAD *3 mode			
			HOT CUE	Set/Call Hot Cue	Delete Hot Cue
			PAD FX	Pad FX on	-
		AUTO LOOP		Auto Loop on/off	-
			SAMPLER	Playback sampler slot	Stop sampler slot

\*1 When using djay for iOS/Android, Hold down the [BEAT SYNC] buttons on deck 1 and deck 2 at least one second at the same time: The Bluetooth connection of the iOS/Android device is canceled.

\*2 When pad mode selection is enabled, you can switch the pad mode by pressing one of the Performance Pads, 1 through 4.

Pad 1 :	Pad 2 :	Pad 3 :	Pad 4 :
Hot Cue	Pad FX	Auto Loop	Sampler
mode	mode	mode	mode
_	_	_	_

\*3 The pad assignment for each pad mode is shown as follows.

### Hot Cue mode

When the [SHIFT] button is not pressed.				When the [SHIFT] button is pressed.			
Hot Cue A	Hot Cue B	Hot Cue C	Hot Cue D	Hot Cue A	Hot Cue B	Hot Cue C	Hoe Cue D
Set/Call	Set/Call	Set/Call	Set/Call	Delete	Delete	Delete	Delete
Hot Cue E	Hot Cue F	Hot Cue G	Hot Cue H	Hot Cue E	Hot Cue F	Hot Cue G	Hot Cue H
Set/Call	Set/Call	Set/Call	Set/Call	Delete	Delete	Delete	Delete

# Pad FX mode

Effect	Effect	Effect	Effect
A	B	C	D
Effect	Effect	Effect	Effect
E	F	G	H

 
# Auto Loop mode

 
1/8 beat	1/4 beat	1/2 beat	1 beat
2 beats	4 beats	8 beats	16 beats

#### Sampler mode

# Left Deck

When the [SHIFT] button is not pressed. Slot 1 Slot 2 Slot 3 Play Slot 4 Play Play Play Slot 6 Play Slot 5 Slot 7 Slot 8 Play Play Play





## Right Deck

When the [SHIFT] button is not pressed.



#### When the [SHIFT] button is pressed.

Slot 9	Slot 10	Slot 11	Slot 12
Stop	Stop	Stop	Stop
Slot 13	Slot 14	Slot 15	Slot 16
Stop	Stop	Stop	Stop

·When using djay for iOS/Android, display and operation may differ depending on the operating system and settings.

© 2024 AlphaTheta Corporation. All rights reserved.