

DDJ-FLX2

Hardware Diagram for rekordbox for Mac/Windows



Group	No.	Name	Function	+SHIFT
1.DECK	* Functions are the same for both left and right decks.			
	1	PLAY/PAUSE	Play/Pause	
	2	CUE	Set/Call cue, Back cue	Jump to track start
	3	SHIFT	Shift	—
	4	JOG	platter	Search
			wheel side	
	5	TEMPO	Tempo control	
6	BEAT SYNC		Beat Sync on/off	Pad mode selection on/off *2
			long press	Set to master deck

Group	No.	Name	Function	+SHIFT
2.EFFECT				
3.MIXER	1	SMART FADER	Smart Fader on/off	—
	1	EQ (HI, MID, LOW)	EQ (HI, MID, LOW)	
	2	CFX	Sound Color FX / Smart CFX	
	3	HEADPHONE CUE (MASTER)	Master out monitor on/off	Smart CFX on/off
	4	HEADPHONE CUE (CH)	Headphones monitor on/off	Select Smart CFX type
	5	CHANNEL FADER	Channel fader / Smart Fader	Channel fader start
	6	CROSSFADER	Crossfader / Smart Fader	Crossfader start
	7	MASTER LEVEL	Master Level	
8	HEADPHONES LEVEL		Monitor level	

Group	No.	Name	Function	+SHIFT
4.PERFORMANCE PADS				
1	PAD *3	mode		
		HOT CUE	Set/Call Hot Cue	Delete Hot Cue
		PAD FX	Pad FX on	
		BEAT LOOP	Auto Beat Loop on/off	—
		SAMPLER	Playback sampler slot	Stop sampler slot
				Load sample to sampler slot

- *1 Vinyl mode can't be turned on/off via the DDJ-FLX2. But it can be turned on/off using keyboard shortcut of rekordbox.
- *2 When pad mode selection is enabled, you can switch the pad mode by pressing one of the Performance Pads, 1 through 4.

Pad 1 : Hot Cue mode	Pad 2 : Pad FX mode	Pad 3 : Beat Loop mode	Pad 4 : Sampler mode
—	—	—	—

*3 The pad assignment for each pad mode is shown as follows.

Hot Cue mode

When the [SHIFT] button is not pressed.

Hot Cue A Set/Call	Hot Cue B Set/Call	Hot Cue C Set/Call	Hot Cue D Set/Call
Hot Cue E Set/Call	Hot Cue F Set/Call	Hot Cue G Set/Call	Hot Cue H Set/Call

When the [SHIFT] button is pressed.

Hot Cue A Delete	Hot Cue B Delete	Hot Cue C Delete	Hot Cue D Delete
Hot Cue E Delete	Hot Cue F Delete	Hot Cue G Delete	Hot Cue H Delete

Pad FX mode

When the [SHIFT] button is not pressed.

Effect A	Effect B	Effect C	Effect D
Effect E	Effect F	Effect G	Effect H

When the [SHIFT] button is pressed.

Effect I	Effect J	Effect K	Effect L
Effect M	Effect N	Effect O	Effect P

Beat Loop mode

1/4 beat	1/2 beat	1 beat	2 beats
4 beats	8 beats	16 beats	32 beats

Sampler mode

Left Deck

When the [SHIFT] button is not pressed.

Slot 1 Play	Slot 2 Play	Slot 3 Play	Slot 4 Play
Slot 5 Play	Slot 6 Play	Slot 7 Play	Slot 8 Play

When the [SHIFT] button is pressed.

Slot 1 Stop/Load	Slot 2 Stop/Load	Slot 3 Stop/Load	Slot 4 Stop/Load
Slot 5 Stop/Load	Slot 6 Stop/Load	Slot 7 Stop/Load	Slot 8 Stop/Load

Right Deck

When the [SHIFT] button is not pressed.

Slot 9 Play	Slot 10 Play	Slot 11 Play	Slot 12 Play
Slot 13 Play	Slot 14 Play	Slot 15 Play	Slot 16 Play

When the [SHIFT] button is pressed.

Slot 9 Stop/Load	Slot 10 Stop/Load	Slot 11 Stop/Load	Slot 12 Stop/Load
Slot 13 Stop/Load	Slot 14 Stop/Load	Slot 15 Stop/Load	Slot 16 Stop/Load