

DDJ-FLX2

Hardware Diagram for rekordbox for iOS/Android




| Group | No. | Name | Function | *SHIFT | |
|------------------|-----|---------------------------------------------------------|---------------------------------|------------------------------|--|
| 1. DECK | | * Functions are the same for both left and right decks. | | | |
| | 1 | PLAY/PAUSE | Play/Pause | | |
| | 2 | CUE | Set/Call cue, Back cue | Jump to track start | |
| | 3 | SHIFT | Shift | — | |
| | 4 | JOG | platter | Search | |
| | | | wheel side | Pitch bend | |
| | 5 | TEMPO | Tempo control | | |
| | 6 | BEAT SYNC *1 | Beat Sync on/off | Pad mode selection on/off *2 | |
| | | | long press | Set to master deck | |
| 2. EFFECT | | | | | |
| | 1 | SMART FADER | Smart Fader / Filter Mix on/off | — | |

| Group | No. | Name | Function | +SHIFT |
|-----------------|-----|------------------------|---------------------------------------|-----------------------------|
| 3. MIXER | | | | |
| 1 | | EQ (HI, MID, LOW) | EQ (HI, MID, LOW) | |
| 2 | | CFX | CFX / Smart CFX | |
| 3 | | HEADPHONE CUE (MASTER) | Master out monitor on/off | CFX / Smart CFX on/off |
| 4 | | HEADPHONE CUE (CH) | Headphones monitor on/off | Select CFX / Smart CFX type |
| 5 | | CHANNEL FADER | Channel fader / Smart Fader | Channel fader start |
| 6 | | CROSSFADER | Crossfader / Smart Fader / Filter Mix | Crossfader start |
| 7 | | MASTER LEVEL | Master Level | |
| 8 | | HEADPHONES LEVEL | Monitor level | |

| Group | No. | Name | Function | +SHIFT |
|---------------------------|-----|-----------|-----------------------|-------------------|
| 4.PERFORMANCE PADS | | | | |
| | 1 | PAD *3 | mode | |
| | | HOT CUE | Set/Call Hot Cue | Delete Hot Cue |
| | | PAD FX | Pad FX on | — |
| | | BEAT LOOP | Auto Beat Loop on/off | — |
| | | SAMPLER | Playback sampler slot | Stop sampler slot |

*1 Hold down the [BEAT SYNC] buttons on deck 1 and deck 2 at least one second at the same time:
The Bluetooth connection of the iOS/Android device is canceled.


*2 When pad mode selection is enabled, you can switch the pad mode by pressing one of the Performance Pads, 1 through 4.

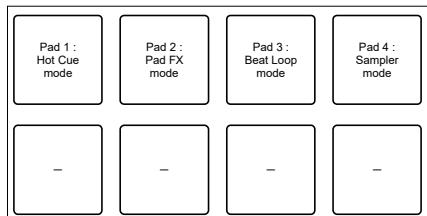


*3 The pad assignment for each pad mode is shown as follows.

Hot Cue mode


When the [SHIFT] button is not pressed.

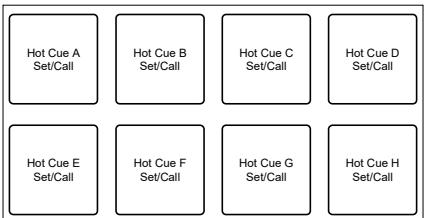


When the [SHIFT] button is pressed.

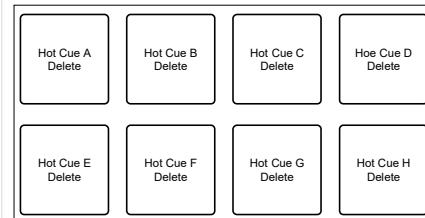

Pad FX mode

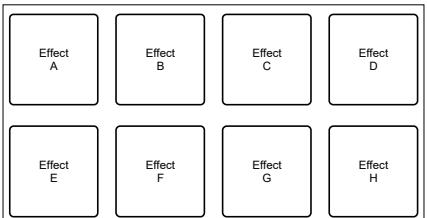


Beat Loop mode

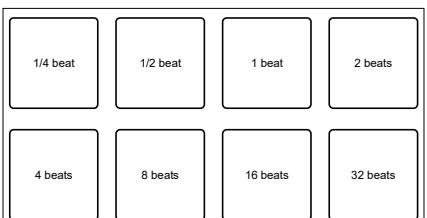


Sampler mode

Left Deck

When the [SHIFT] button is not pressed.

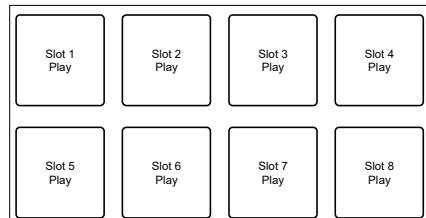


When the [SHIFT] button is pressed.

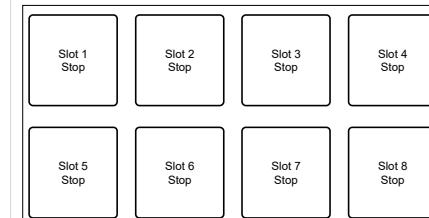

Right Deck

When the [SHIFT] button is not pressed.

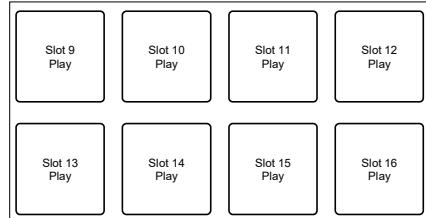

When the [SHIFT] button is pressed.

