

# XDJ-AZ

## Hardware Diagram for Serato DJ Pro



GROUP	No.	NAME	FUNCTION	+SHIFT
<b>1. DECK</b>	1	JOG	スクラッチ (Vinyl On) ピッチベンド (Vinyl Off)	Search(Skip Mode)
	2	TEMPO	テンポ調整	Search(Skip Mode)
	3	TEMPO RESET	テンポリセット	
	4	MASTER TEMPO	Master Tempo On/Off	
	5	TEMPO RANGE	Tempo Range(±6%, ±10%, ±16%, ±WIDE)	
	6	KEY SYNC	Key Sync On/Off	
	7	SYNC	Sync On	Sync Off
	8	JOG ADJUST (Hardware Control)		
	9	JOG MODE	Vinyl On/Off	
	10	DECK SELECT	DECK切替	
	11	VINYL SPEED ADJUST ON/OFF	Vinyl speed adjust On/Off	
	12	VINYL SPEED ADJUST (GUI / SHORT CUT)	Adjust braking speed	
	13	SEARCH	Fast Forward/Rewind	
	14	TRACK SEARCH	Prev/ Next Track	
	15	SHIFT	Shift	
	16	SLIP REVERSE	Censor	Reverse
	17	SLIP	SLIP mode On/Off	
	18	BEAT JUMP	Beat Jump Fwd/Back	Beat Jump Value select
	19	4 BEAT	4 Beat Autoloop Enable	
	20	8 BEAT	8 Beat Autoloop Enable	
	21	LOOP IN	Loop in / Loop in adjust	
	22	LOOP OUT	Loop out / Loop out adjust	
	23	RELOOP/EXIT	Reloop/Exit	
	24	CALL NEXT / 2X	Loop slot select next	
	25	CALL PREV / 1/2X	Loop slot select previous	
	26	DELETE	Loop Slot Delete	
	27	MEMORY	Loop Slot Save	
28	PLAY/PAUSE	再生/一時停止	Slutter Play	
29	CUE	Set/call cue, Back cue		
30	b JOG Ring (Hardware Control)			
31	DECK QUANTIZE	Quantize on/off		
32	LOAD	トラックのロード		
33	INSTANT DOUBLES	2倍押し		
34	NEEDLE SEARCH	NEEDLE SEARCH		
35	TIME MODE (GUI / Time display)	TIME MODE (REMAINING / ELAPSED TIME)		
<b>2. EFFECT</b>	1			
	2			
	3			
<b>3. MIXER</b>	1	CROSS FADER	CROSSFADER	CROSSFADER START
	2	CH FADER	CHANNEL FADER	CHANNEL FADER START
	3	CH CUE (Headphone)	Headphone monitor On/Off	Tap BPM
<b>4. BROWSER</b>	1	Rotary Selector	リサーチ	Library Scroll Fast Library Scroll
	2	BACK	Jump between panels (forward)	No Mapping
	3	TAG TRACK/REMOVE	Jump between panels	No Mapping
	4	TRACK FILTER	Add track to Prepare	No Mapping
<b>5. PERFORMANCE PADS</b>	1	HOT CUE	HOT CUE	GATE CUE MODE
	2	BEAT LOOP	AUTO LOOP	STEMS MODE
	3	SLIP LOOP	LOOP ROLL	PITCH PLAY
	4	BEAT JUMP	BEAT JUMP	SAMPLER

GROUP	No.	NAME	FUNCTION	+SHIFT	
<b>5. PERFORMANCE PADS</b>	5	PERFORMANCE PAD A	mode HOT CUE AUTO LOOP LOOP ROLL BEAT JUMP GATE CUE MODE STEMS MODE PITCH PLAY SAMPLER	HOT CUE 設定/再生 Trigger Auto Loop Trigger Loop Roll Beat Jump Left HOT CUE 設定/再生(Gated playback) Stem ON/OFF Play Cue Points over variable pitch ranges SAMPLER slot再生	Delete HOT CUE      Select Hot Cue points SAMPLER slot停止/ロード
		PERFORMANCE PAD B	mode HOT CUE AUTO LOOP LOOP ROLL BEAT JUMP GATE CUE MODE STEMS MODE PITCH PLAY SAMPLER	HOT CUE 設定/再生 Trigger Auto Loop Trigger Loop Roll Beat Jump Left HOT CUE 設定/再生(Gated playback) Stem ON/OFF Play Cue Points over variable pitch ranges SAMPLER slot再生	Delete HOT CUE      Select Hot Cue points SAMPLER slot停止/ロード
		PERFORMANCE PAD C	mode HOT CUE AUTO LOOP LOOP ROLL BEAT JUMP GATE CUE MODE STEMS MODE PITCH PLAY SAMPLER	HOT CUE 設定/再生 Trigger Auto Loop Trigger Loop Roll Beat Jump Left HOT CUE 設定/再生(Gated playback) Stem ON/OFF Play Cue Points over variable pitch ranges SAMPLER slot再生	Delete HOT CUE      Select Hot Cue points SAMPLER slot停止/ロード
		PERFORMANCE PAD D	mode HOT CUE AUTO LOOP LOOP ROLL BEAT JUMP GATE CUE MODE STEMS MODE PITCH PLAY SAMPLER	HOT CUE 設定/再生 Trigger Auto Loop Trigger Loop Roll Beat Jump Left HOT CUE 設定/再生(Gated playback) Stem ON/OFF Play Cue Points over variable pitch ranges SAMPLER slot再生	Delete HOT CUE      Select Hot Cue points SAMPLER slot停止/ロード
	PERFORMANCE PAD E	mode HOT CUE AUTO LOOP LOOP ROLL BEAT JUMP GATE CUE MODE STEMS MODE PITCH PLAY SAMPLER	HOT CUE 設定/再生 Trigger Auto Loop Trigger Loop Roll Beat Jump Left HOT CUE 設定/再生(Gated playback) Stem FX Play Cue Points over variable pitch ranges SAMPLER slot再生	Delete HOT CUE      Select Hot Cue points SAMPLER slot停止/ロード	
	PERFORMANCE PAD F	mode HOT CUE AUTO LOOP LOOP ROLL BEAT JUMP GATE CUE MODE STEMS MODE PITCH PLAY SAMPLER	HOT CUE 設定/再生 Trigger Auto Loop Trigger Loop Roll 巻き戻し HOT CUE 設定/再生(Gated playback) Stem FX Play Cue Points over variable pitch ranges SAMPLER slot再生	Delete HOT CUE   No Mapping HOT CUE 設定/再生(normal playback) No Mapping Select Hot Cue points SAMPLER slot停止/ロード	
	PERFORMANCE PAD G	mode HOT CUE AUTO LOOP LOOP ROLL BEAT JUMP GATE CUE MODE STEMS MODE PITCH PLAY SAMPLER	HOT CUE 設定/再生 Trigger Auto Loop Trigger Loop Roll 単送り HOT CUE 設定/再生(Gated playback) Stem FX Play Cue Points over variable pitch ranges SAMPLER slot再生	Delete HOT CUE   No Mapping HOT CUE 設定/再生(normal playback) No Mapping Select Hot Cue points SAMPLER slot停止/ロード	
	PERFORMANCE PAD H	mode HOT CUE AUTO LOOP LOOP ROLL BEAT JUMP GATE CUE MODE STEMS MODE PITCH PLAY SAMPLER	HOT CUE 設定/再生 Trigger Auto Loop Trigger Loop Roll Censor(Slip Reverse) HOT CUE 設定/再生(Gated playback) Stem FX Play Cue Points over variable pitch ranges SAMPLER slot再生	Delete HOT CUE   Reverse HOT CUE 設定/再生(normal playback) No Mapping Select Hot Cue points SAMPLER slot停止/ロード	